



<b>Error Code List</b>			
<b>IDU Display</b>	<b>Fault Details</b>	<b>Failure Cause</b>	<b>Action</b>
F1	Indoor room temperature sensor fault	1.IDU room tempreature sensor is loose or short circuit.	1.loose: connect it well again; short circuit: replace a new IDU room tempreature sensor
		2.IDU main PCB is damaged.	2. replace a new IDU main PCB
F2	Indoor coil sensor fault	1.IDU coil sensor is loose or short circuit.	1.loose: connect it well again; short circuit: replace a new IDU coil sensor
		2.IDU main PCB is damaged.	2.replace a new IDU main PCB
F3	Outdoor coil temperature sensor fault	1.ODU coil temperature sensor is loose or short circuit.	1.replace a new ODU coil tempreature sensor
		2.IDU main PCB is damaged.	2.replace a new IDU main PCB
F4	Indoor fan motor fault	1.IDU fan is blocked.	1.clean the fan's block
		2. fan motor terminal is loose	2.connect it well again
		3.IDU fan motor is damaged.	3.replace a new IDU fan motor
		4.IDU main PCB is damaged.	4.replace a new IDU main PCB