


〔 Remote Controller 〕

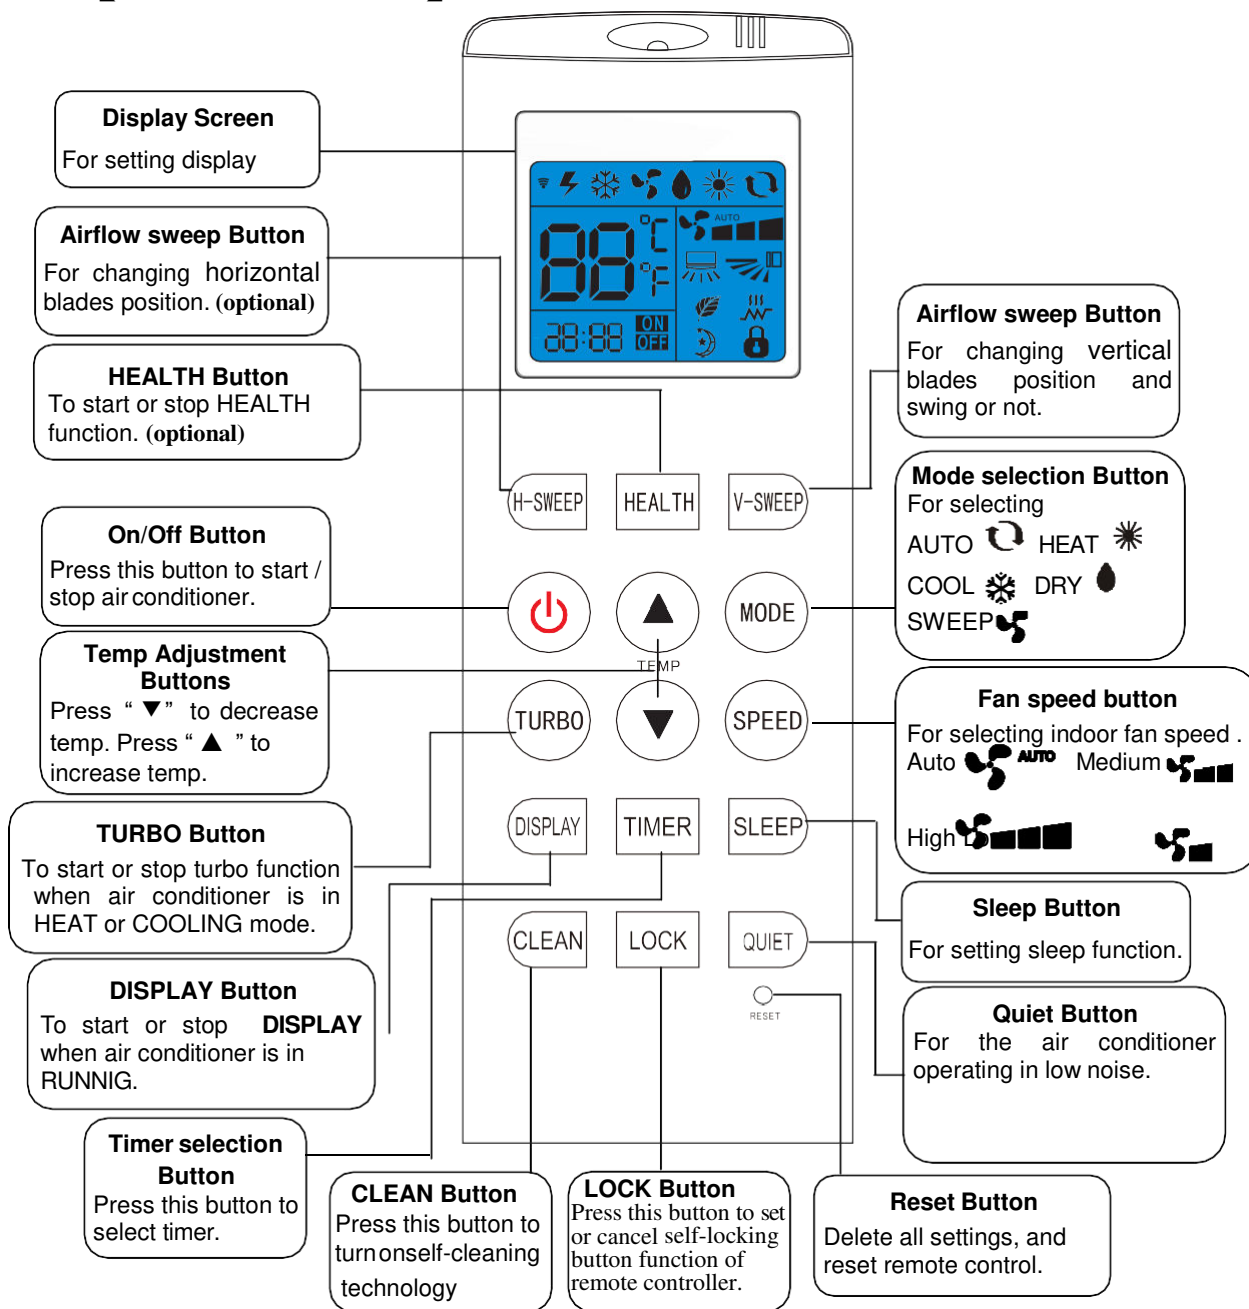

Remarks:

1. The function and display of Heat is not available for cooling-only air conditioner. .
2. When there is something wrong with the remote controller, please press ‘RESET’ button and then operate again.
3. HEAT、 AUTO function and display are not available for cooling-only type air conditioner.
4. If user want to make the room air cool or warm quickly ,user can press “turbo” button in cooling or heating mode, air conditioner will run in power function. If press “turbo” button again, air conditioner will exit power function.
5. The above illustration of remote controller is only for reference, it may be slightly different from the actual product you selected.

